

Kraftig

Self-leveling Urethane Concrete Over Plywood Subfloor



Perdure P72 Topcoat
(1–2 coats)

Anti-skid Additive
(fine or medium)


Kraftig SL
Urethane Concrete 🦿
(1/8" thickness)

30/40 mesh dry sand
Fully saturate the surface. After
24 hours remove excess sand.

Spiderlath
fiberglass reinforcement
emdedded in *Kraftig SC Primer*

Perdure PJF
joint filler

Plywood subfloor

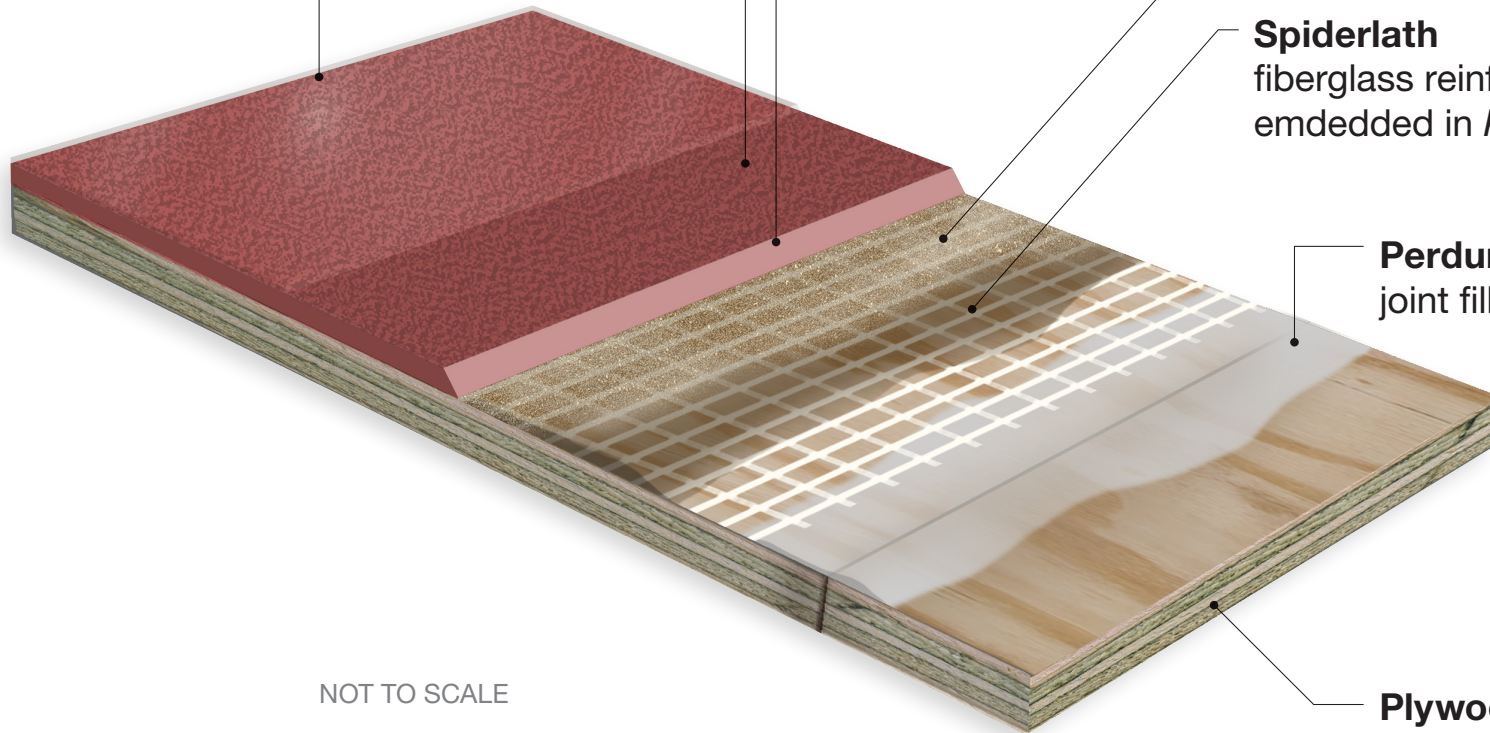

NOT TO SCALE

IMPORTANT: Please refer to each product's technical data sheet for detailed installation instructions.

🦿 Colored with integral colors. Quarry Red shown here.